

### **7-4-6      Error Code [2600]**

---

---

**1. Error code definition**

**Water leakage**

**2. Cause, check method and remedy**

Check that water does not leak from the pipes in such as the humidifier.

### **7-4-7      Error Code [2601]**

---

---

**1. Error code definition**

**Water supply cutoff**

**2. Cause, check method and remedy**

| Cause   | Check method and remedy   |
|---|---|
| (1) The water tank of the humidifier is empty.    | Check the amount of supply water.<br>Check for the solenoid valve and for the connection. |
| (2) The solenoid valve for humidification is OFF. | Check the connector.  |
| (3) Disconnected float switch                     | Check the connecting part.  |
| (4) Poor operation of float switch                | Check for the float switch.   |
| (5) Frozen water tank                             | Turn off the power source of the water tank to defrost, and turn it on again.             |