


When the left lamp of OPERATION INDICATOR lamp blinks ON and OFF in every 0.5-second.
Outdoor unit does not operate.

D How to check miswiring and serial signal error

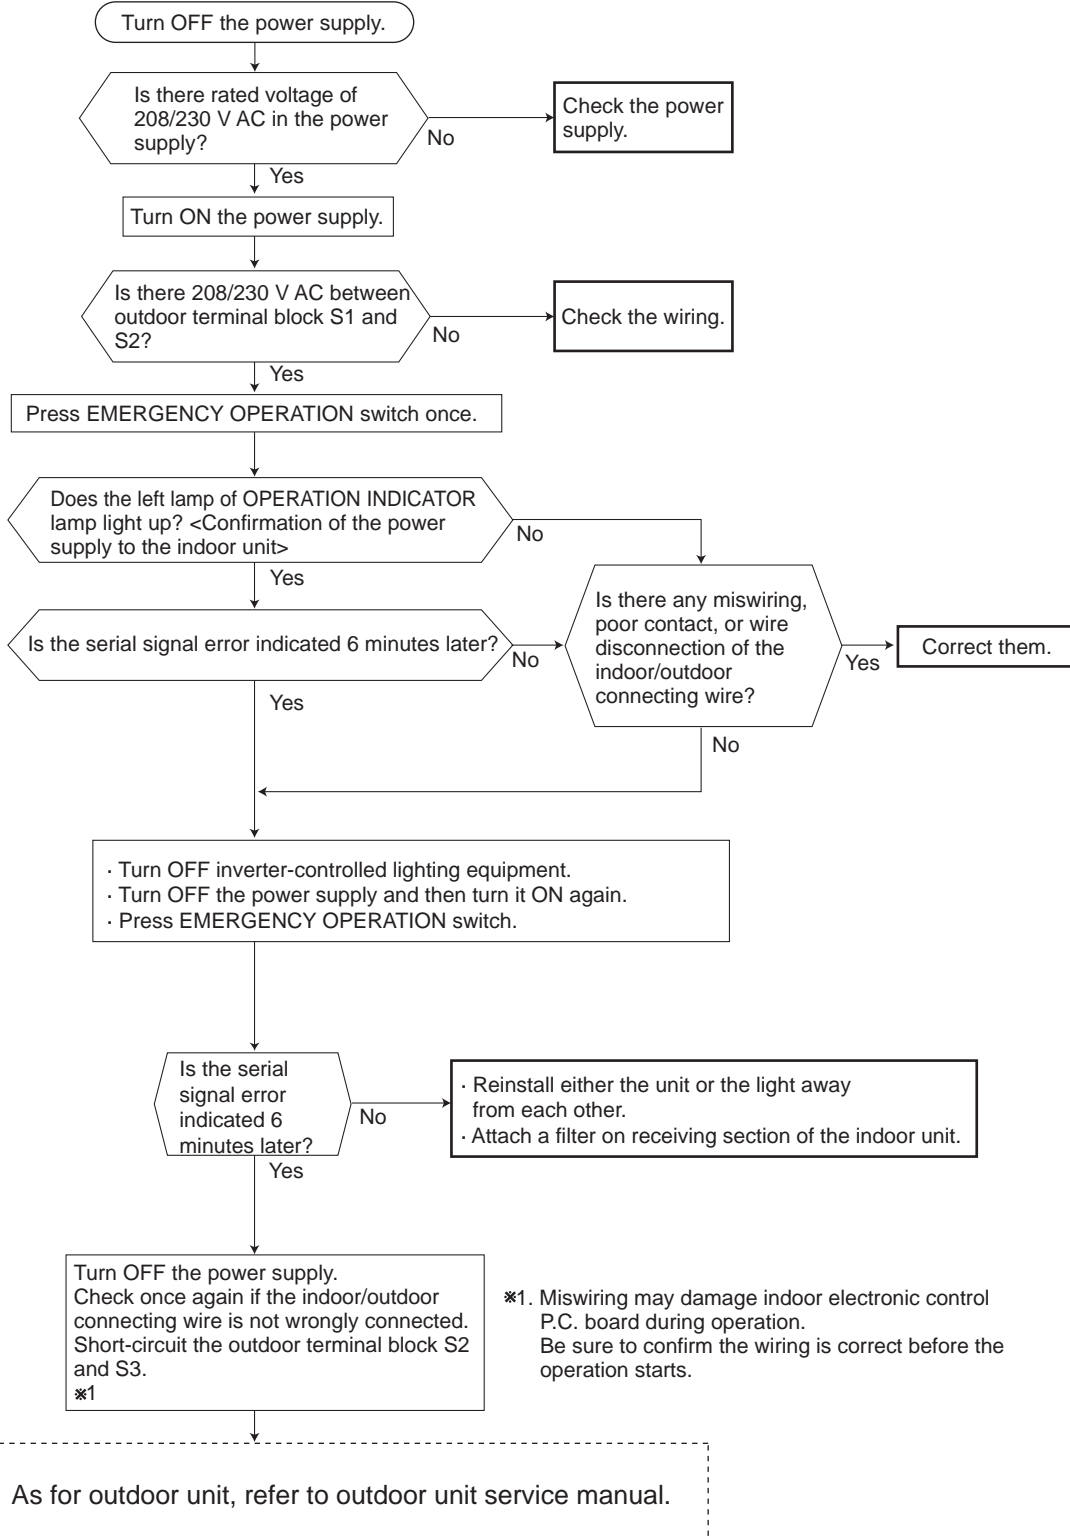

※1. Miswiring may damage indoor electronic control P.C. board during operation.
Be sure to confirm the wiring is correct before the operation starts.